

## **Instruction for the Fpi commercial cooker**

The Fpi induction cookers are made for professional cooking in restaurants and large scale kitchens. All models are carefully controlled before delivery and full warranty is given for all models according to warranty terms (could be downloaded on [ww.fpi.nu](http://ww.fpi.nu))

**Installations must be done by a qualified professional electrician, The Fpi take no responsibility of miswiring that can cause electrical hazard and reparations.**

### **Use and locations**

6 KW 380volt 3-phases. Leave at least 4inch/10cm air space behind the cooker and make sure that nothing is under that could stop the air to blow through the cooker. If this happens the equipment will stop and give indications in the display.

**Take care of the cooker and attend to that the cooker is duly cleaned even behind and underneath. Avoid splashing water or oil on the cooker.**

### **To think about**

For induction only use a pan of magnetic material (steel/iron). These products are branded for induction. To Fpi wok models a wok-pan is included and no other wok pans are recommended be used because they could damage the equipment and give lower effects.

### **Usage**

Use the cooker in the same way as a gas stove. The handle is a step model and the effect is increasing clockwise. In the display you get the effect in numbers 1-9. The effect will begin when the pan is placed in the glass bowl, If you remove the pan the wok will immediately stop and after about 2 minutes shut down. The first time you start to use a new pan you have to burn the pan gently before you start to wok. The effect is very strong and fast, faster than gas. After use you could switch of the safety switch if anyone is installed.

**Take care of your cooker well and it will hold a long time!**

### **Addition**

If the equipments is delivered without a plug it **shall be connected pursuant to to the following schedule by an authorized electrician.** Fpi take no responsibility of miswiring that can cause electrical hazard and reparations.

It is the responsibility of the customer to inform new owner and other user about warranty ( See [ww.fpi.nu](http://ww.fpi.nu) )

Phase 1 color : black

Phase 2 color : blue

Phase 3 color : brown

Ground : yellow/green

If you have any questions before installations please contact our service before installations. For 220 volt 1 phase the plug is installed

